


- 1 - TARATURA VALVOLA MASSIMA PRESSIONE
  - 3 - REGOLAZIONE CONTROPRESSIONE ED ANTISCARRUCOLAMENTO FUNI
  - 4 - PROVA VALVOLA DI BLOCCO
  - 7 - STROZZATORE MESSA IN PRESSIONE E PARTENZA IN SALITA
  - 8 - REGOLAZIONE VELOCITÀ DI DISCESA
  - 9 - TARATURA PRESSIONE POMPA A MANO
- EVD - ELETTROVALVOLA DISCESA  
R - PUNTO DI RALLENTAMENTO SALITA  
S - PUNTO DI FERMATA IN SALITA  
Q - PUNTO DI RALLENTAMENTO IN DISCESA  
T - PUNTO DI FERMATA IN DISCESA  
L - PIANO SUPERIORE  
P - PIANO INFERIORE

- 1 - ADJUSTING OF THE VALVE MAX PRESSURE
  - 3 - ROD COUNTER-PRESSURE AND ROPE ANTI-LOOSENING AND DEVICE ADJUSTING
  - 4 - SCREW DEVICE FOR RUPTURE VALVE TESTING
  - 7 - CHOCKE DEVICE FOR PRESSURE ACTIVATION AND UPWARD START
  - 8 - DOWN HIGH SPEED REGULATOR
  - 9 - HAND PUMP PRESSURE ADJUSTING
- EVD - DOWN ELECTROVALVE  
R - UP SLOWING POINT  
S - UP STOP POINT  
Q - DOWN STOP POINT  
T - DOWN STOP POINT  
L - UPPER FLOOR  
P - LOWER FLOOR

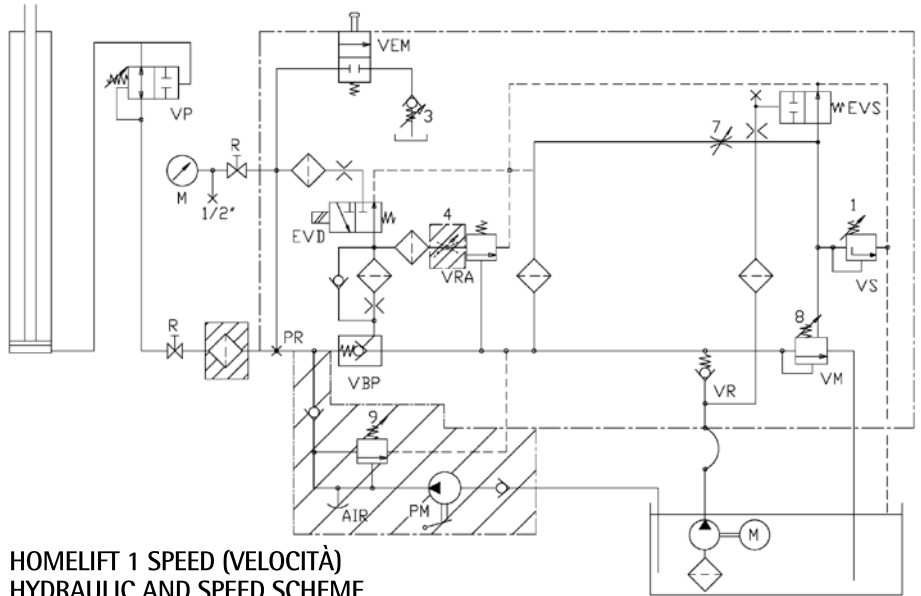

**CE** HOMELIFT 1 SPEED (VELOCITÀ)  
HYDRAULIC AND SPEED SCHEME



Via F.lli Kennedy 22/D  
I - 24060 Bagnatica (BG) - ITALY  
Tel. +39 035 68.96.11 - Fax +39 035 68.96.71

Cod.8H200979